



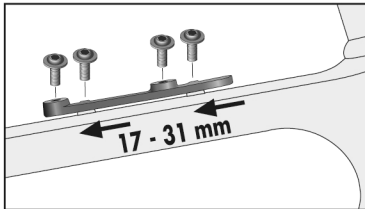


ACCESSORY


F9964
Offset-Plate
64 mm

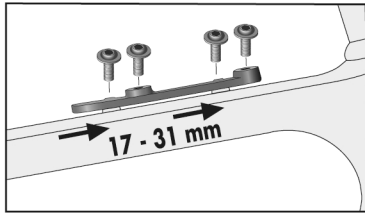



OPTION

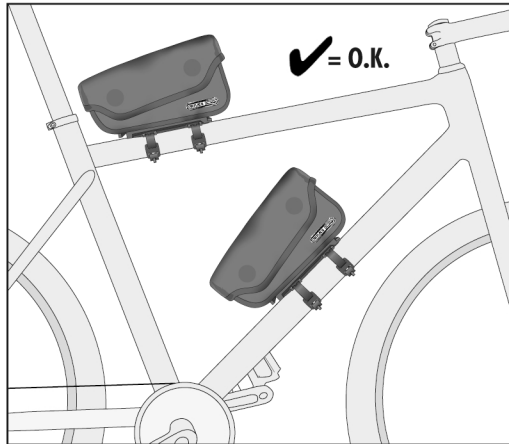

3.1 MOUNT MOBILE PHONE HOLDER

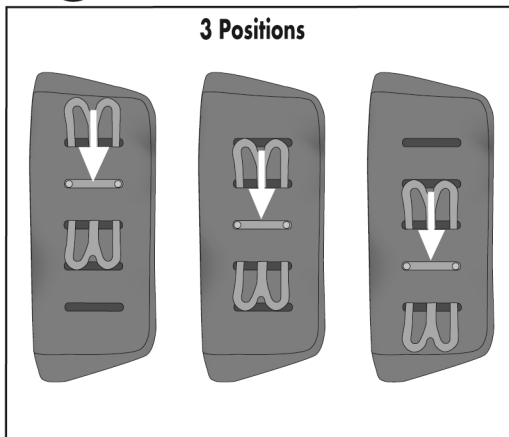

4.1 MOUNT MOBILE PHONE

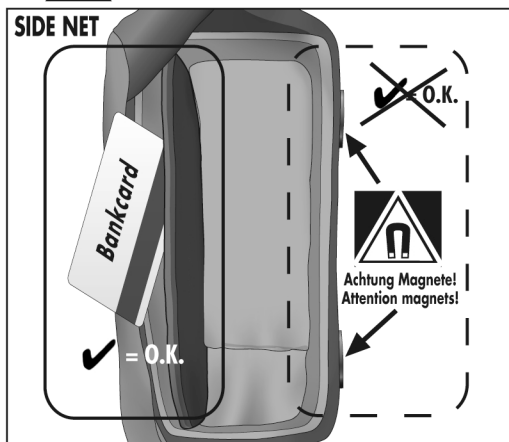
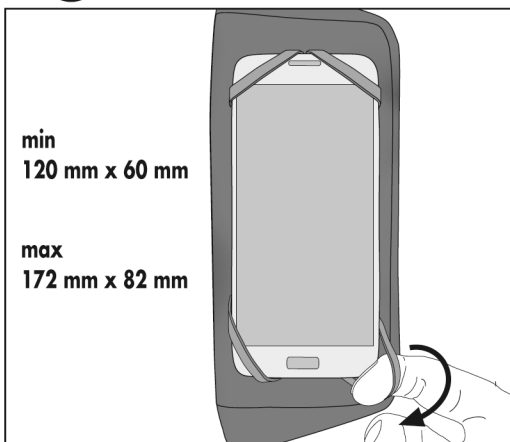


TOPTUBE-BAG




- DE MONTAGEANLEITUNG
- GB ASSEMBLY INSTRUCTIONS
- FR INSTRUCTIONS DE MONTAGE
- IT ISTRUZIONI DI MONTAGGIO
- NL MONTAGE HANDLEIDING
- DK MONTERINGSVEJLEDNING

- ES INSTRUCCIONES DE MONTAJE
- SE MONTERINGSANVISNING
- NO MONTERINGSANVISNING
- FI ASENNUSOHJEET
- PL INSTRUKCJA MONTAŻU
- JP 装着方法

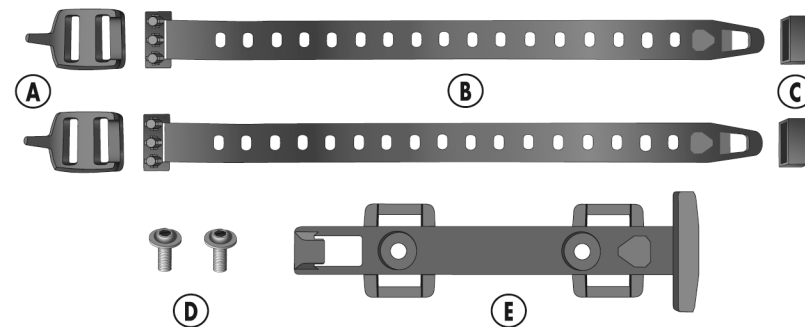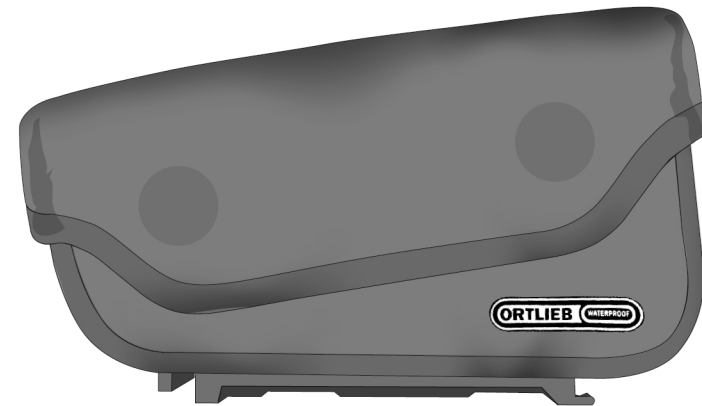



WEITERE INFORMATIONEN: 
MORE INFORMATION: 
<https://qr.de/ToptubeBag>

1.1 O-STRAP MOUNT

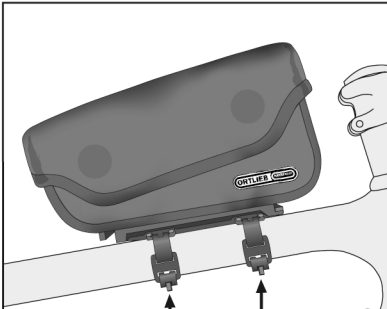


UM KRATZER ZU VERMEIDEN, BENUTZE RAHMENSCHUTZ-FOLIE AN DEN KONTAKTSTELLEN (nicht beinhaltet)
TO AVOID SCRATCHES, USE ADHESIVE FRAME PROTECTION AT CONTACT POINTS (not included)

1.2

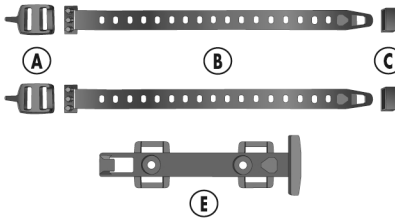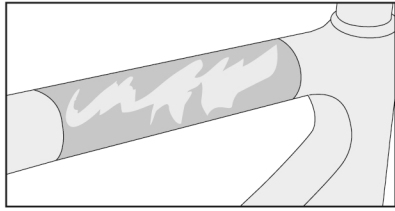


1.3

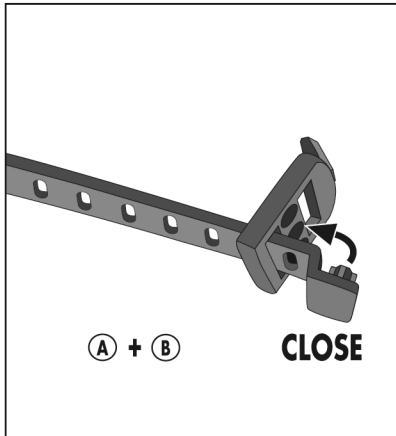


(A) + (B) **CLOSE**

1.4

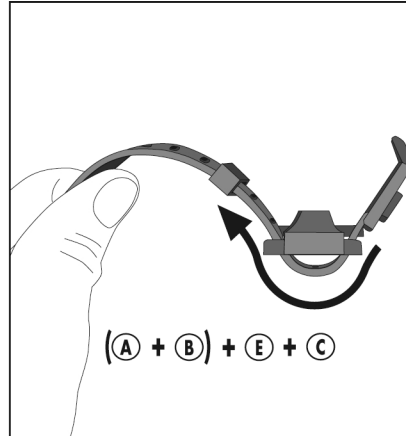


(A) + (B) + (E) + (C)

1.5

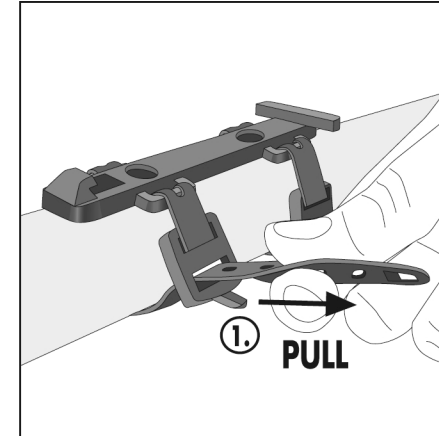


1. **PULL**

1.5

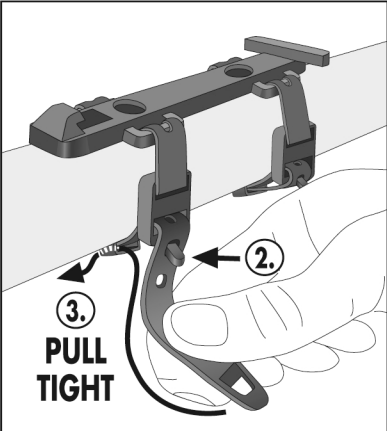


3. **PULL TIGHT**

1.6

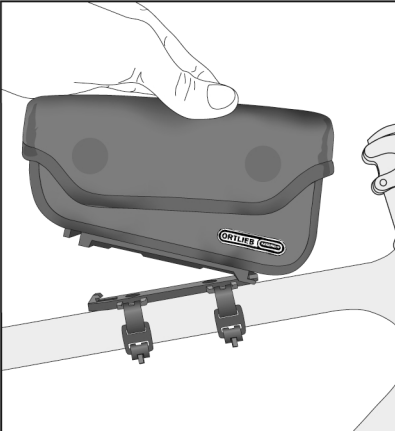

1.7

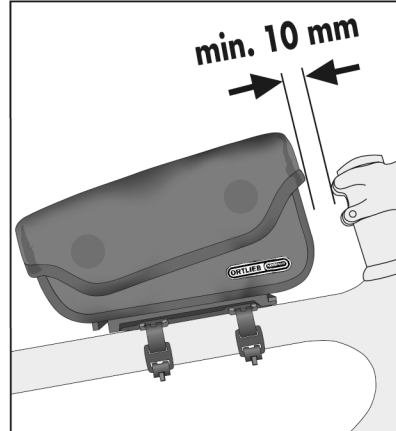

min. 10 mm


1.8 ACCESSORY



! >55 mm use




F9965 O-Straps
14,5/200 mm
as extension

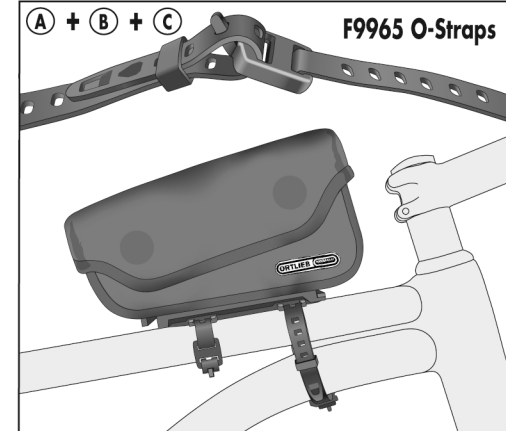



(A) + (B) + (C) **F9965 O-Straps**

2.1 DIRECT MOUNT

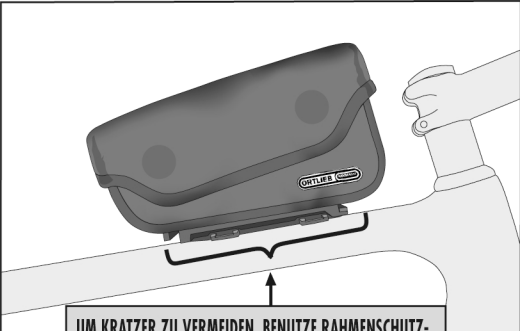


UM KRATZER ZU VERMEIDEN, BENUTZE RAHMENSCHUTZ-FOLIE AN DEN KONTAKTSTELLEN (nicht beinhaltet)
TO AVOID SCRATCHES, USE ADHESIVE FRAME PROTECTION AT CONTACT POINTS (not included)


2.2

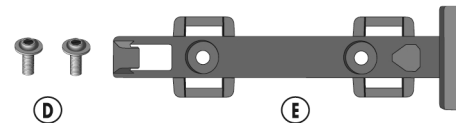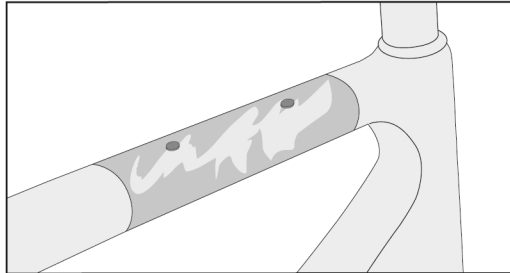

2.3

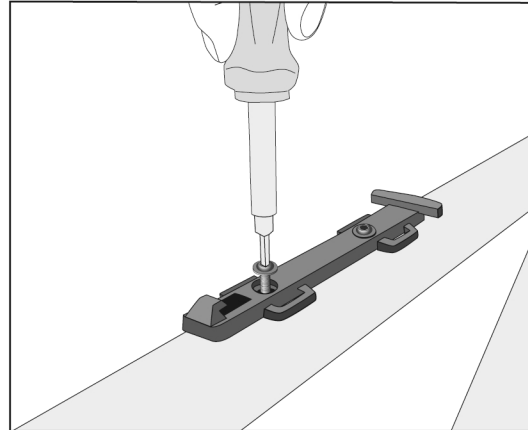

2.4

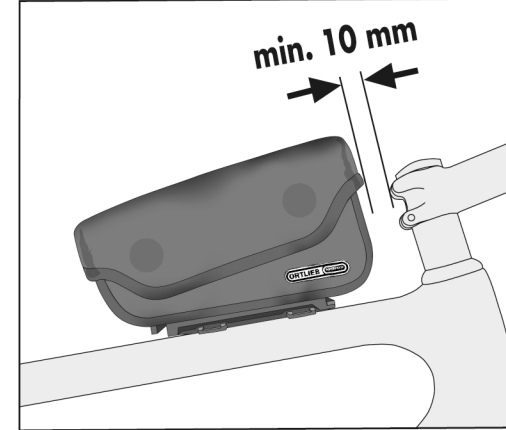

min. 10 mm